

Mains Live

No Earth
Required

Connect
Neutrals
from the
mains
Supply &
the
actuator in
a Terminal
Block



Actuator
Live to Close
(Brown)

Actuator Live
To Open
(Black)