



Warning!
Flat glass units are heavy.
Large units may require up to 8 persons to lift



For Mardome Glass
on to Sloping or 300mm Kerb
See **Page 2** overleaf

Fixing Quantities


Length of Nominal rooflight Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7

(All fixings supplied in packs of 5.)

Contents


Please unpack and check that all correct parts are included and undamaged.

All Mardome Glass

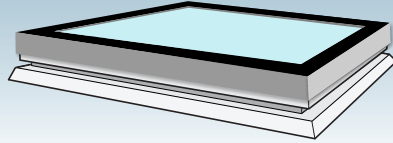


With either assembly, you will receive:

 Kerb Fixings




Manual Opening Unit Extras

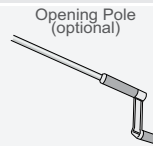

Mardome Opening Unit - Pre-Installation Information

Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

Manual Opening rooflight on existing upstand

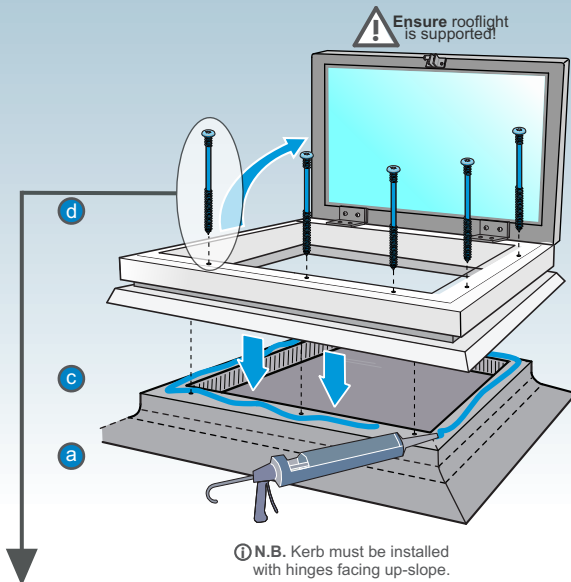


N.B. Kerb must be installed with hinges facing up-slope.

Installation Instructions

- Ensure** rooflight is supported in open position to avoid damage!
- a** Install roof covering to cover existing upstand in accordance with manufacturer's installation recommendations.
 - N.B.** It is important that there should be no excessive build up of layers, the top surface should be level and free from any protrusions or projections which may prevent adequate weather proofing.
- b** Carefully remove roof light from its packaging and ensure that hinged rooflight is unlocked from frame and can be opened to 90°. If not disconnect, as shown.
- c** Mastic/Silicone around the edge of the upstand opening and correctly place kerb, ensuring it is located squarely to the upstand with hinges facing up-slope.
- d** Fix kerb to the builders upstand using the 125mm kerb fastener.
- e** Ensure that the hinged rooflight is connected to the frame and locked into the closed position


Kerb Fixing

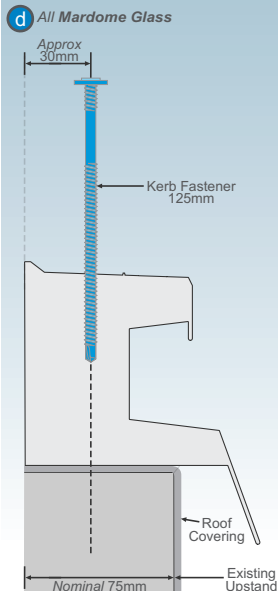

Mardome Installation

Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

Rooflight connection to frame

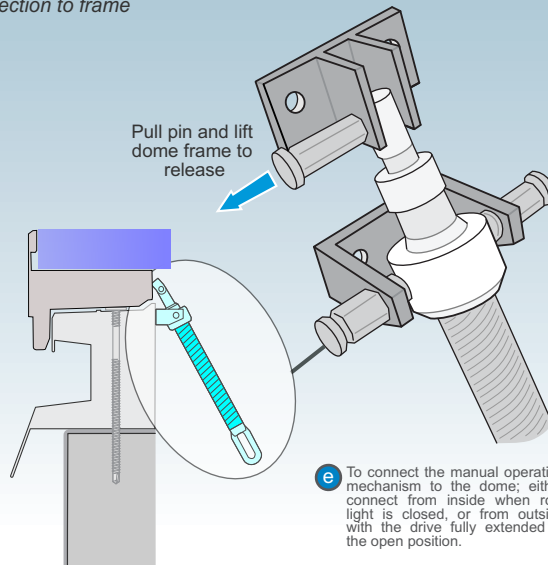

e To connect the manual operating mechanism to the dome; either connect from inside when roof light is closed, or from outside with the drive fully extended in the open position.

TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.



Warning!
Flat glass units are heavy.
Large units may require up to 8 persons to lift



For Mardome Glass
on to Existing Upstand
See Page 1 overleaf

Fixing Quantities


Length of Nominal rooflight Side (mm)	Number of fixings per side
600, 750	2
900, 1050, 1200	3
1350, 1500, 1650	4
1800, 1950	5
2100, 2250	6
2400	7

(All fixings supplied in packs of 5.)


Contents

Please unpack and check that all correct parts are included and undamaged.


All Mardome Glass

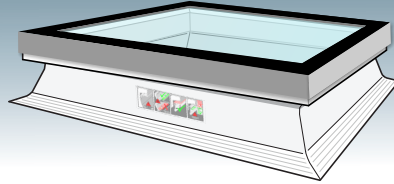

 With either assembly, you will receive:
Kerb Fixings



Manual Opening Unit Extras

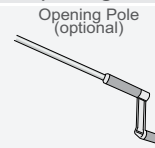


Mardome Installation


Please note that all Health and Safety Regulations must be followed on site throughout the installation process.

Installation Instructions

Manual Opening rooflight on to sloping or 300mm kerb

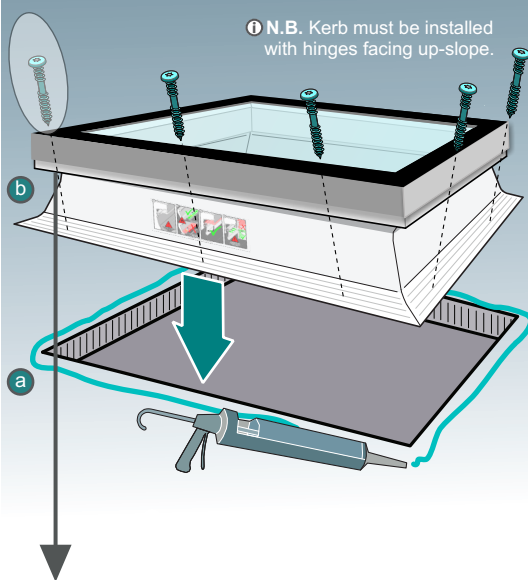


Roof Covering Installation

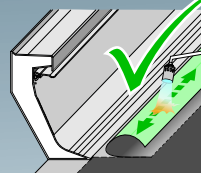

If required, lightly torch roof covering.




WARNING:
Never apply direct heat or naked flame to the roof light!

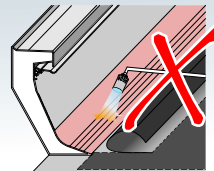

IMPORTANT: Roof Covering Clamp Locking



Push along line as shown to lock. **DO NOT** push on soft area!

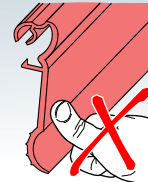

a Mastic/Silicone around the edge of the roof opening and correctly position kerb, ensuring it is located squarely over the roof opening with hinges facing up-slope.

b Fix kerb to the roof using the 55mm kerb fastener.

See above **Fixing Quantities** table for the correct quantity of fastenings required for the size of the rooflight.

N.B. Length of side refers to the nominal rooflight size (equivalent to inside base of kerb foot).

c Install roof covering up to lip, to stop under roof covering clamp, ensuring it **does not** foul clamp. Install in accordance with manufacturer's installation recommendations



d Lock the roof covering clamp down fully, as shown.

e See e (below) for further information on opening mechanism

Kerb Fixing


c d All Mardome Glass

- Kerb
- Roof Covering
- Structural Member
- Insulation

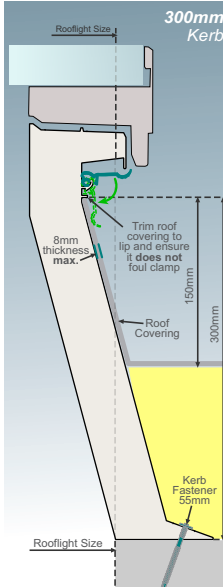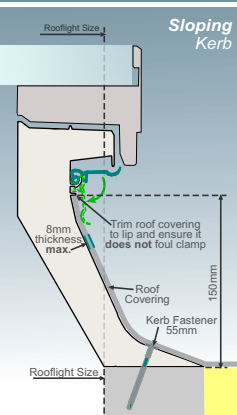

Mardome Opening Unit - Further Information

e For Manual Linear Drive Connection

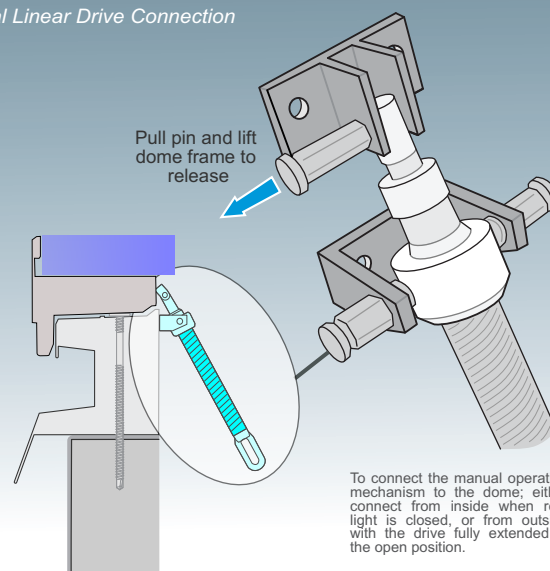

To connect the manual operating mechanism to the dome; either connect from inside when roof light is closed, or from outside with the drive fully extended in the open position.

TECHNICAL SUPPORT: For any technical information/queries please contact your supplier.